



2000 Series Engine Heater Outer Case Removal

Fuel pump replacement will take approximately 5-10 minutes.

Tools required.
2.5mm Hex Key

STEP 1

Position the heater on a stable workbench.

The outer case consists of two halves.

Locate the 4 hex bolts (yellow rectangle) as shown in the pic below.

This is the case that you need to remove by undoing the 2.5mm hex head bolts. (red circles) 22pcs total. DO NOT REMOVE THE 4 BOLTS IN THE YELLOW RECTANGLE.





STEP 2

With the 22 hex bolts now removed, gently remove the case from the main frame to allow you to reach in and disconnect the battery connection. Once disconnected, you can put the case with the battery aside and out of the way.

